


INSTRUCTIONS FOR #83081 CORRUGATED SCENERY STRIPS

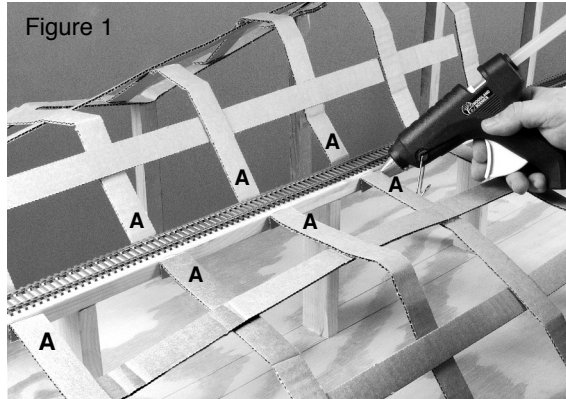

STEP 1

Use staple gun or hot glue gun to secure a series of vertical strips to your track support at locations marked "A" in figure 1. Space these strips about 4-3/4 inches apart along the roadbed.

STEP 2



Form same strips to desired shape, cut to length, and secure to benchwork at location "B" shown in figure 2.

STEP 3

Install horizontal strips in a basket-weave pattern, again spacing them 4-3/4" apart from each other (see all figures). Use hot glue or staples to attach to vertical strips. Continue to add to this pattern until the area is covered.

STEP 4

Use plaster cloth (available separately) to cover the strips (figure 3). Follow the manufacturer's instructions for application.

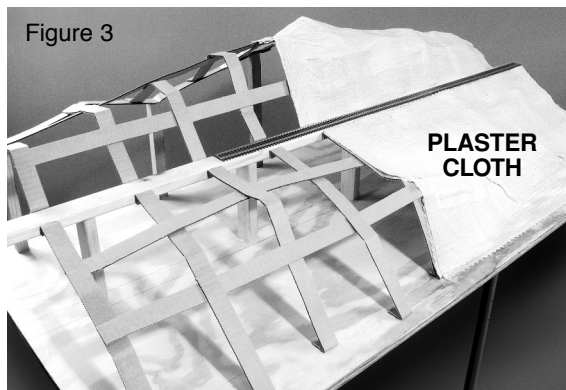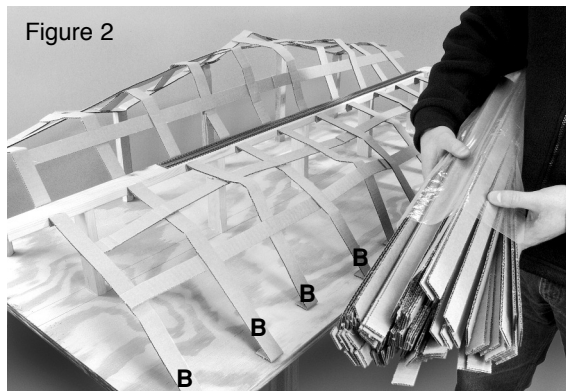


If you need technical assistance,
please call 1-908-464-1094 weekdays, 1 pm to 5 pm ET.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com

MM123004

INSTRUCTIONS FOR #83081 CORRUGATED SCENERY STRIPS

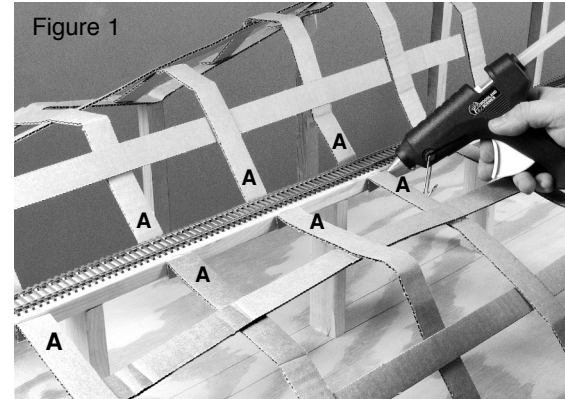

STEP 1

Use staple gun or hot glue gun to secure a series of vertical strips to your track support at locations marked "A" in figure 1. Space these strips about 4-3/4 inches apart along the roadbed.

STEP 2



Form same strips to desired shape, cut to length, and secure to benchwork at location "B" shown in figure 2.

STEP 3

Install horizontal strips in a basket-weave pattern, again spacing them 4-3/4" apart from each other (see all figures). Use hot glue or staples to attach to vertical strips. Continue to add to this pattern until the area is covered.

STEP 4

Use plaster cloth (available separately) to cover the strips (figure 3). Follow the manufacturer's instructions for application.

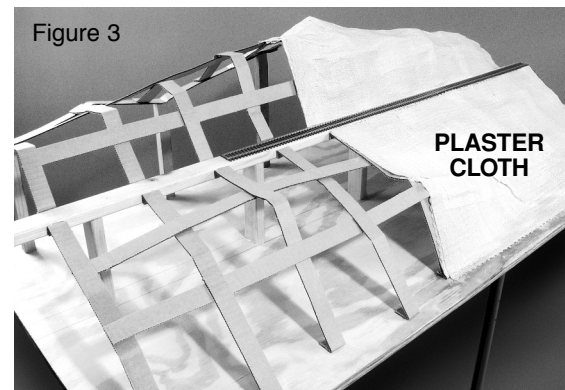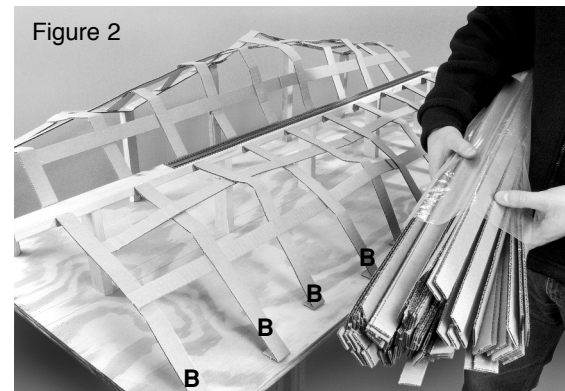

If you need technical assistance,
please call 1-908-464-1094 weekdays, 1 pm to 5 pm ET.

Micro-Mark® 340 Snyder Avenue • Berkeley Heights, NJ 07922
MMTechService@micromark.com

MM123004