



# EZ-RJ45<sup>®</sup>

## Instructions

For use with EZ-RJ45<sup>®</sup> Cat 5e & Cat 6 connectors.

1. Strip off approximately two inches of outer cable jacket.



2. Straighten wires and put in desired order. See color code wiring chart below.

3. Trim wire ends so all conductors are equal length and uniform. Use built in wire cutter in EZ-RJ45<sup>®</sup> Crimp Tool.




4. Insert wires into the EZ-RJ45<sup>®</sup> Connector and pull connector down over the cable jacket. Cable jacket should seat snugly in rear of connector.

5. Double check wiring sequence now.

6. Push the EZ-RJ45<sup>®</sup> connector into the EZ-RJ45<sup>®</sup> Crimp Tool. Make sure the connector is fully seated in crimp cavity.

7. Actuate the EZ-RJ45<sup>®</sup> Tool to crimp and trim wires.

Break off any remaining loose wires.

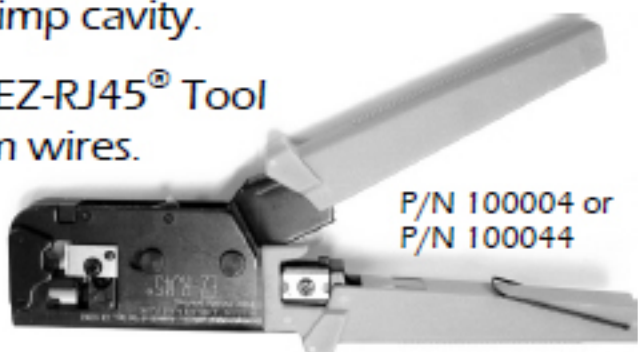

P/N 100004 or P/N 100044

### T568A/T568B Wiring Chart

Wire #	1	2	3	4	5	6	7	8
T568A	W/G	G	W/O	BL	W/BL	O	W/BR	BR
T568B	W/O	O	W/G	BL	W/BL	G	W/BR	BR

# PLATINUM TOOLS<sup>®</sup>

[www.platinumtools.com](http://www.platinumtools.com)

©Platinum Tools, Inc. 2011

Manufactured by SullStar Technologies, Inc. Patented: 5,996,224, 6,017,237 & 6,105,229 & Foreign Patents. Patents insured.

EZ-RJ45<sup>®</sup> is a registered trademark of SullStar Technologies, Inc.



Keystone Jack

EZ-RJ45 IS Sheet rev. B3